# SIMULATION

SIMULATION		2
SIMULATIO	DN	2
SIMULATIO	ON SETTING	

## SIMULATION

### SIMULATION

EN01N80ZZZ090102001001

1. PRESS THE [Simulation] BUTTON. (Main menu)



SHTS80ZZZ0900001



2. SELECT THE TARGET ECU AND PRESS THE [OK] BUTTON. (Simulation select window)

Select E	CU soft with s	imulation.	Į –		
-Select B	CU part num	ber	· ·		
Equip	ment				•
ECU	part number				•
				01/	01

SHTS80ZZZ0900003

BER AND PRESS THE [OK] BUTTON. (Select ECU soft with simulation) HINT

SELECT THE SYSTEM CATEGORY AND SOFTWARE NUM-

3.

- You can directly enter the system category and software number.
- Auto complete is available for entering the software number.

Itermeniation Program with SCUERCEN; Shuring the simulation;

Image: Address to the EngineEQU.

Image: Address the EngineEQU.

<

4. READING STARTS. (Main menu)

SHTS80ZZZ0900004



SHTS80ZZZ0900005

5. WHEN READING IS COMPLETED, THE MAIN SCREEN FOR THE WORK ITEM SELECTED IN 2 IS DISPLAYED. (Main screen for the corresponding work[Simulation in progress])

AFTER STEP 3 IN "Simulation" IF YOU HAVE APPROPRIATE

AUTHORITY, THE SIMULATION SETTING SCREEN APPEARS.

### HINT

1.

- Then, follow the common procedure.
- The work done for simulation is not recorded.

### SIMULATION SETTING

(Setting simulation)

EN01N80ZZZ090102001002

[Simulation setting window][SC0502]-[During t... DTC setting OK Cancel

SHTS80ZZZ0900006

### **DTC SETTING**

1. UNCHECK THE DTCS YOU DO NOT USE AND PRESS THE [OK] BUTTON. (Setting simulation DTC)

### HINT

In the default setting, all DTCs are checked.

	Diag code	DIC	-	
			Ξ	
V	Abnormal immobilizer communication	B279A		
V	Installation of engine ECU incompatible wit	B279C		
V	Malfunction of fuel cutoff valve (GND shor	P0006		
V	Malfunction of fuel cutoff valve (B short-c	P0007		
V	Abnormal Phasing by revolution pulsar	P0016		
V	Malfunction of VNT actuator	P0045	-	
•	m	•		